

TIGIMI



STANDARD OPERATION PROCEDURE

FOR
TIGIMI
VENTLESS
DEEP FRYER

PARTS LIST

FILTRATION PAD



ODOR FILTRATION



FRONT VIEW



TOP VIEW


DAILY MAINTENANCE

(END OF SHIFT OR EVERY 12 HOURS)



SAFETY FIRST

1. **Turn off the unit** (hold power button for 3 seconds) and allow the **oil** to **cool** to a **safe handling temperature**.

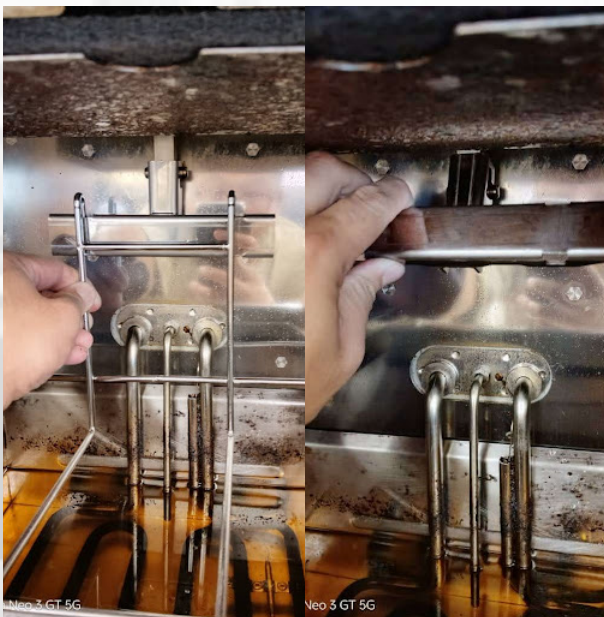

2. **Remove the bracket and hanger**, clean with soap and rinse it with water then dry it with clean cloth or kitchen towel.

DAILY MAINTENANCE

(END OF SHIFT OR EVERY 12 HOURS)



3. Press the **up button** to **lift up** the **heating element**.

4. **Remove** the **oil tank** and **strain** it into a **new tank** or **bucket**.


5. **Clean** interior & exterior surfaces, use a **damp cloth** to wipe all surface.

6. **Pour** in **strained oil/ fresh cooking oil** back into **clean tank** and **place back** into the machine.

7. Press the **down button** to **lower down** the **heating element**.

8. **Assemble** back the **bracket and hanger**, and the Tigimi ventless deep fryer is **ready** to be use again.

FILTRATION PAD MAINTENANCE (EVERY WEEK)

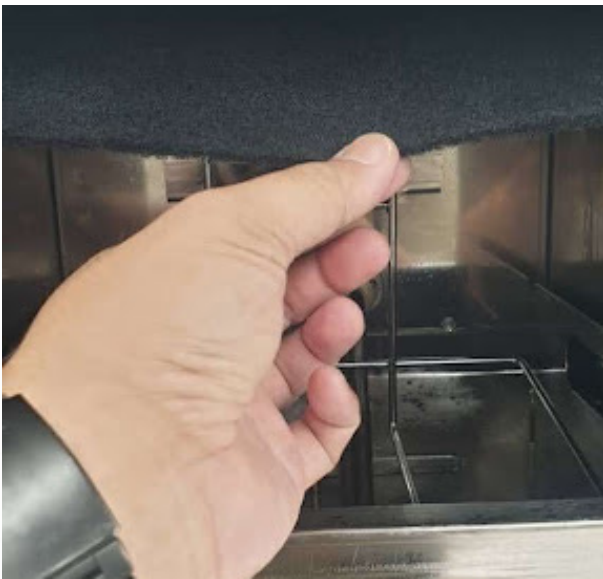

1. **Check filter pad** every week, make sure it's in **good condition** (no **tear** or any **breakage** on the pad)

2. **Clean** with soap and **rinse** with tap water. (**do not use high pressure** water to rinse it as it might **damage the pad**)




3. **Squeeze** it gently to force out excessive water from the pad. (**Do not twist** the pad as it will **tear** and **break the pad**)

4. Let it **air dry** before placing back into the machine.

5. **Change** a new filtration pad every **2 weeks**.

CHANGE OF ODOR FILTRATION (EVERY 6 MONTH)

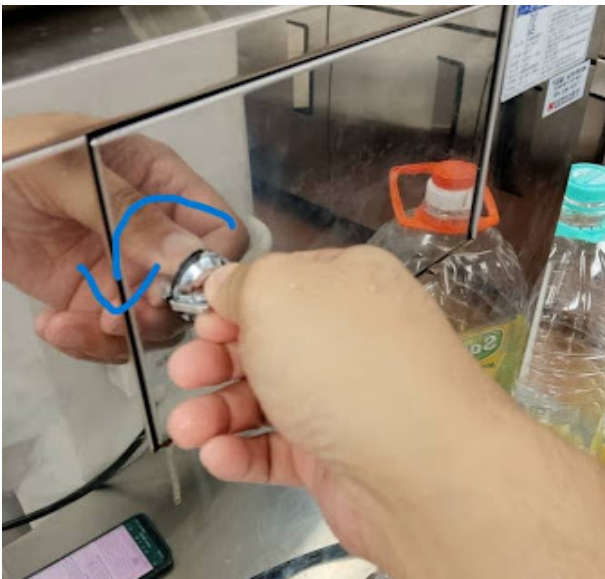

1. **Change** every **6 months** or when filter no longer **functioning properly**.

2. **Turn off** the unit before **switching** into **new odor filter**.

3. **Turn the knob** to the **left** and open the **filter window**, then hold onto the **handle** and **pull out** the **odor filter**.



4. Place back a **new odor filter** and push it in until the end, then close the filter window.